



## WARNING

READ AND UNDERSTAND ALL INSTRUCTIONS PRIOR TO INSTALLING OR USING THIS PRODUCT. THE FOLLOWING ARE GENERAL SAFETY WARNINGS INTENDED TO BRING ATTENTION TO PROPER INSTALLATION AND AREAS OF THE PRODUCT WHERE PROPER USAGE MUST BE FOLLOWED. FAILURE TO FOLLOW INSTRUCTIONS COULD LEAD TO PRODUCT DAMAGE, PRODUCT FAILURE AND/OR SERIOUS INJURY, OR DEATH.

DO NOT MACHINE WASH OR DRY CLEAN THE PRODUCT. EXPOSURE TO DETERGENTS, BLEACH, OR SOLVENTS MAY RESULT IN EXPEDITED DEGRADATION AND COMPROMISE THE PRODUCT.

INSPECT THE PRODUCT FOR DISCOLORATION, CUTS, TEARS, ABRASIONS OR CRACKS BEFORE AND AFTER EACH USE.

DO NOT EXPOSE THE PRODUCT TO OPEN FLAME OR EXCESSIVE HEAT. DO NOT ALTER THE PRODUCT IN ANY WAY.

# OPERATOR'S MANUAL LV-120 PLATE CARRIER

V1.01

## CONTENTS

- 01 ..... COMPONENTS LIST
- 02 ..... SHOULDER STRAP ATTACHMENT
- 03 ..... CUMMERBUND ATTACHMENT
- 04 ..... PLACARD ATTACHMENT
- 05 ..... ASSAULT PLACARD ATTACHMENT
- 06 ..... G HOOK ATTACHMENT
- 07 ..... BACK PANEL ATTACHMENT

DESIGNED, TESTED, AND MANUFACTURED IN **THE USA**

# SEC 01 COMPONENTS AND ITEM LEGEND

## COMPONENTS



01



02



03



04



05



06



07



08



09



10



11

## ITEM LIST

- 01 ..... CUMMERBUND LEGS
- 02 ..... CUMMERBUND SLEEVE
- 03 ..... SHOCK CORD
- 04 ..... LEG LOCK
- 05 ..... MALE TUBE
- 06 ..... CORD LOCK
- 07 ..... BUCKLE
- 08 ..... SHOULDER STRAPS
- 09 ..... SHOULDER COVERS
- 10 ..... FRONT PLATE BAG
- 11 ..... REAR PLATE BAG

# SEC 02 ASSEMBLING THE SHOULDER STRAP

**STRAP PARTS  
DIAGRAM**

**FRONT**

**BACK**



ROUNDED TAB

SLEEVE

NOTCH

PULL TAB

SQUARE TAB



## SEC 02 ASSEMBLING THE SHOULDER STRAPS

*(NOTE: STEPS 2-5 ARE CUTAWAY VIEWS OF THE INSIDE OF THE PLATE BAG.)*



**POSITION SHOULDER STRAP WITH LOOP PORTION FACING UPWARDS. FEED STRAP INTO SHOULDER STRAP OPENING ON FRONT PLATE BAG.**



**FEED STRAP THROUGH SHOULDER STRAP ATTACHMENT POINT.**



**FOLD BOTTOM OF STRAP UPWARDS AND SEAT THE SQUARE TAB INTO THE TAB NOTCH.**




**FEED ROUNDED TAB INTO THE TAB SLEEVE.**



## SEC 02 ASSEMBLING THE SHOULDER STRAPS

*(NOTE: THIS IS A CUTAWAY VIEW OF THE INSIDE OF THE PLATE BAG.)*

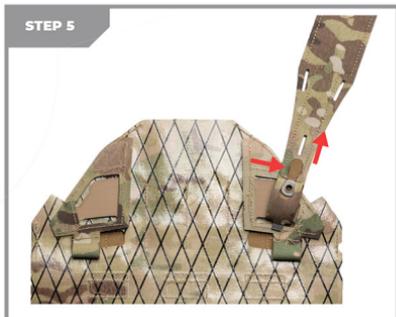

**TAKE THE PULL TAB AND PULL IT UPWARD  
SECURING THE CURV TAB INTO THE CURV TAB  
SLEEVE.**



## SEC 02 ASSEMBLING THE SHOULDER STRAPS

STEP 1



CONNECT FRONT AND REAR PLATE BAGS TOGETHER VIA THE HOOK AND LOOP ON THE SHOULDER STRAPS. (ADJUST FOR SIZE)

STEP 2



PLACE SHOULDER COVERS UNDERNEATH CONNECTED SHOULDER STRAPS WITH HOOK PORTION POSITIONED INSIDE OF THE SHOULDER STRAP.

STEP 3



FOLD THE OUTSIDE FLAP WITH LOOP AND THEN THE HOOK SIDE ONTO ITSELF.

STEP 4



REPEAT PROCESS FOR OTHER SIDE.



# SEC 03 COMPONENTS AND ITEM LEGEND

## COMPONENTS



01



02



03



04



05



06

## ITEM LIST

- 01 ..... CUMMERBUND LEGS
- 02 ..... CUMMERBUND SLEEVE
- 03 ..... SHOCK CORD
- 04 ..... LEG LOCK
- 05 ..... MALE TUBE
- 06 ..... BARREL LOCK



# SEC 03 COMPONENTS AND ITEM LEGEND

LEGEND

## SHOCK CORD PASS THROUGH LEGEND



# SEC 03 ASSEMBLING THE CUMMERBUND

STEP 1



FEED THE TWO ENDS OF THE SHOCK CORD, THROUGH THE BOTTOM OF HOLES 9 AND 10, CREATING EQUAL LENGTH ON BOTH SIDES.

STEP 2



INSERT LEGS INTO THE BOTTOM TWO LEG SLOTS ON THE REAR PLATE BAG.

STEP 3



TAKE THE LEFT SIDE OF THE SHOCK CORD AND CROSS IT OVER TO THE CUMMERBUND LEG ON THE RIGHT SIDE.

STEP 4



INSERT SHOCK CORD INTO THE CHANNEL AT THE REAR OF THE RIGHT LEG AND FEED ALL THE WAY THROUGH.



# SEC 03 ASSEMBLING THE CUMMERBUND

STEP 5



TAKE RUNNING END OF SHOCK CORD AND INSERT IT INTO HOLE 5.

STEP 6



BRING SHOCK CORD UP THROUGH HOLE 1.

STEP 7



SLIP CORD LOCK ONTO THE SHOCK CORD AND SLIDE TO THE HOLE.

STEP 8



TIE OVERHAND KNOT AT DESIRED LENGTH TO ALLOW ROOM FOR MICRO ADJUSTMENT TO THE TENSION.



## SEC 03 ASSEMBLING THE CUMMERBUND

STEP 9



REPEAT PROCESS FOR OTHER SIDE, USING HOLES 8 AND 4.

STEP 10




INSERT YOUR ARMOR PLATE, THEN BRING THE REAR FLAP DOWN AND TUCK INTO THE PLATE BAG SECURING IT WITH THE HOOK AND LOOP.



# SEC 03 ASSEMBLING THE CUMMERBUND

**STEP 1**

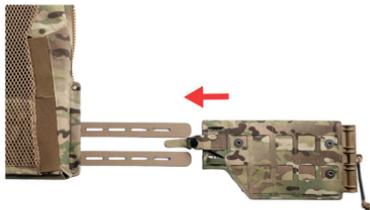

SLIDE CUMMERBUND SLEEVE ONTO CUMMERBUND LEGS. ALIGN SLOTS ON LEGS WITH SLOTS ON THE SLEEVE AT THE LENGTH THAT BEST FITS YOUR BODY SIZE.

**STEP 2**



ORIENT THE LEG LOCK SO THAT THE NOTCH IS FACING THE REAR PLATE BAG. MAKE SURE LEG SLOTS ALIGN WITH SLEEVE SLOTS BEFORE INSERTING THE LEG LOCK.

**STEP 3**



INSERT LEG LOCK INTO ALIGNED SLOTS TO THE PICTURED DEPTH. PASS LEG LOCK THROUGH BOTH SLEEVE AND LEGS.

**STEP 4**



BEND IT DOWNWARD AND PUSH THROUGH TOP SLOTS.



## SEC 03 ASSEMBLING THE CUMMERBUND

STEP 1



FLIP THE REAR PLATE BAG OVER AND BRING THE FLAP THROUGH THE SPACE BETWEEN THE LEGS.

STEP 2



PRESS THE BUCKLE DOWN UNTIL YOU HEAR A SNAP.

STEP 3



TUCK THE TAB INTO THE APPROPRIATE SLOT.



# SEC 04 PLACARD ATTACHMENT

STEP 5



GRAB ALL COMPONENTS NEEDED.

STEP 6



ATTACH BUCKLE TO TAB LOCATED UNDERNEATH THE FLAP

STEP 7



REPEAT PROCESS FOR THE OTHER SIDE.

STEP 8



ATTACH THE PLACARD USING THE MALE CLIPS AND INSERT THEM INTO THE FEMALE BUCKLES ON THE PLATE BAG.



# SEC 05 ASSAULT PLACARD ATTACHMENT

**STEP 1**



**GRAB ALL COMPONENTS NEEDED.**

**STEP 2**



**FEED THE LEGS INTO THE MOLLE ON THE FRONT OF THE PLATE BAG COMPLETELY THROUGH.**

**STEP 3**



**FOLD HOOK AND LOOP STRAPS DOWN ONTO THE FRONT OF THE PLATE BAG.**

**STEP 4**



**TAKE THE BUCKLE TAB AND SNAP IT ONTO THE MALE SIDE ON THE FRONT PLATE BAG.**



# SEC 06 ATTACHING G HOOK PLACARDS

STEP 1



GRAB ALL NEEDED COMPONENTS.

STEP 2



LIFT THE FABRIC ON THE FRONT PLATE BAG TO EXPOSE THE ATTACHMENT FLAP.

STEP 3



HOOK IN THE G HOOK INTO THE ATTACHMENT FLAP.

STEP 4



REPEAT THE PROCESS TO THE OTHER SIDE.



# SEC 07 BACK PANEL ATTACHMENT

**STEP 1**



GRAB ALL NEEDED COMPONENTS.

**STEP 2**



TUCK THE RIGID TABS INTO THE MOLLE ON THE REAR PLATE BAG.

**STEP 3**



TUCK THE BOTTOM RIGID TABS 1 SLOT LOWER THAN THE ZIPPER END ON SIZE MEDIUM BAGS.

**STEP 4**



ALIGN THE ZIPPER SIDES AND ZIP DOWN TOWARDS THE BOTTOM OF THE PLATE BAG.

