

DEFRATOR'S MANUAL LY-120 PLATE CARRIER

VIO

CONTENTS

01	 COMPONENTS LIST
02	 SHOULDER STRAP ATTACHMENT
03	 CUMMERBUND ATTACHMENT
04	 PLACARD ATTACHMENT
05	 ASSAULT PLACARD ATTACHMENT
06	 G HOOK ATTACHMENT
07	 BACK PANEL ATTACHMENT

DESIGNED, TESTED, AND MANUFACTURED IN THE USA


SPIRITUSSYSTEMS.COM

DECEMBER 2025_V1.01

SEC 01 COMPONENTS AND ITEM LEGEND



SEC 02 ASSEMBLING THE SHOULDER STRAP

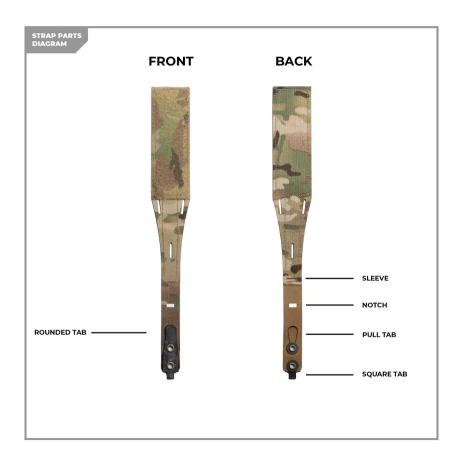

SEC 02 ASSEMBLING THE SHOULDER STRAPS

(NOTE: STEPS 2-5 ARE CUTAWAY VIEWS OF THE INSIDE OF THE PLATE BAG.)



POSITION SHOULDER STRAP WITH LOOP PORTION FACING UPWARDS. FEED STRAP INTO SHOULDER STRAP OPENING ON FRONT PLATE BAG.



FEED STRAP THROUGH SHOULDER STRAP ATTACHMENT POINT.



FOLD BOTTOM OF STRAP UPWARDS AND SEAT THE SQUARE TAB INTO THE TAB NOTCH.



FEED ROUNDED TAB INTO THE TAB SLEEVE.

SEC 02 ASSEMBLING THE SHOULDER STRAPS

(NOTE: THIS IS A CUTAWAY VIEW OF THE INSIDE OF THE PLATE BAG.)



TAKE THE PULL TAB AND PULL IT UPWARD SECURING THE CURV TAB INTO THE CURV TAB SLEEVE.

SEC 02 ASSEMBLING THE SHOULDER STRAPS



CONNECT FRONT AND REAR PLATE BAGS TOGETHER VIA THE HOOK AND LOOP ON THE SHOULDER STRAPS. (ADJUST FOR SIZE)



FOLD THE OUTSIDE FLAP WITH LOOP AND THEN THE HOOK SIDE ONTO ITSELF.



PLACE SHOULDER COVERS UNDERNEATH CONNECTED SHOULDER STRAPS WITH HOOK PORTION POSITIONED INSIDE OF THE SHOULDER STRAP.



REPEAT PROCESS FOR OTHER SIDE.

SEC 03 COMPONENTS AND ITEM LEGEND



SEC 03 COMPONENTS AND ITEM LEGEND





TAKE RUNNING END OF SHOCK CORD AND INSERT IT INTO HOLE 5.



BRING SHOCK CORD UP THROUGH HOLE 1.



SLIP CORD LOCK ONTO THE SHOCK CORD AND SLIDE TO THE HOLE.



TIE OVERHAND KNOT AT DESIRED LENGTH TO ALLOW ROOM FOR MICRO ADJUSTMENT TO THE TENSION.



REPEAT PROCESS FOR OTHER SIDE, USING HOLES 8 AND 4.



INSERT YOUR ARMOR PLATE , THEN BRING THE REAR FLAP DOWN AND TUCK INTO THE PLATE BAG SECURING IT WITH THE HOOK AND LOOP.



SLIDE CUMMERBUND SLEEVE ONTO CUMMERBUND LEGS. ALIGN SLOTS ON LEGS WITH SLOTS ON THE SLEEVE AT THE LENGTH THAT BEST FITS YOUR BODY SIZE.



INSERT LEG LOCK INTO ALIGNED SLOTS TO THE PICTURED DEPTH. PASS LEG LOCK THROUGH BOTH SLEEVE AND LEGS.



ORIENT THE LEG LOCK SO THAT THE NOTCH IS FACING THE REAR PLATE BAG. MAKE SURE LEG SLOTS ALIGN WITH SLEEVE SLOTS BEFORE INSERTING THE LEG LOCK.



BEND IT DOWNWARD AND PUSH THROUGH TOP SLOTS.



FLIP THE REAR PLATE BAG OVER AND BRING THE FLAP THROUGH THE SPACE BETWEEN THE LEGS.



PRESS THE BUCKLE DOWN UNTIL YOU HEAR A SNAP.



TUCK THE TAB INTO THE APPROPRIATE SLOT.

SEC 04 PLACARD ATTACHMENT



GRAB ALL COMPONENTS NEEDED.



REPEAT PROCESS FOR THE OTHER SIDE.



ATTACH BUCKLE TO TAB LOCATED UNDERNEATH THE FLAP



ATTACH THE PLACARD USING THE MALE CLIPS AND INSERT THEM INTO THE FEMALE BUCKLES ON THE PLATE BAG.

SEC 05 ASSAULT PLACARD ATTACHMENT



GRAB ALL COMPONENTS NEEDED.



FEED THE LEGS INTO THE MOLLE ON THE FRONT OF THE PLATE BAG COMPLETELY THROUGH.



FOLD HOOK AND LOOP STRAPS DOWN ONTO THE FRONT OF THE PLATE BAG.



TAKE THE BUCKLE TAB AND SNAP IT ONTO THE MALE SIDE ON THE FRONT PLATE BAG.

SEC 06 ATTACHING G HOOK PLACARDS



GRAB ALL NEEDED COMPONENTS.



LIFT THE FABRIC ON THE FRONT PLATE BAG TO EXPOSE THE ATTACHMENT FLAP.



HOOK IN THE G HOOK INTO THE ATTACHMENT FLAP.



REPEAT THE PROCESS TO THE OTHER SIDE.

SEC 07 BACK PANEL ATTACHMENT



GRAB ALL NEEDED COMPONENTS.



TUCK THE RIGID TABS INTO THE MOLLE ON THE REAR PLATE BAG.



TUCK THE BOTTOM RIGID TABS 1 SLOT LOWER THAN THE ZIPPER END ON SIZE MEDIUM BAGS.



ALIGN THE ZIPPER SIDES AND ZIP DOWN TOWARDS THE BOTTOM OF THE PLATE BAG.