



WARNING

READ AND UNDERSTAND ALL INSTRUCTIONS PRIOR TO INSTALLING OR USING THIS PRODUCT. THE FOLLOWING ARE GENERAL SAFETY WARNINGS INTENDED TO BRING ATTENTION TO PROPER INSTALLATION AND AREAS OF THE PRODUCT WHERE PROPER USAGE MUST BE FOLLOWED. FAILURE TO FOLLOW INSTRUCTIONS COULD LEAD TO PRODUCT DAMAGE, PRODUCT FAILURE AND/OR SERIOUS INJURY, OR DEATH.

DO NOT MACHINE WASH OR DRY CLEAN THE PRODUCT. EXPOSURE TO DETERGENTS, BLEACH, OR SOLVENTS MAY RESULT IN EXPEDITED DEGRADATION AND COMPROMISE THE PRODUCT.

INSPECT THE PRODUCT FOR DISCOLORATION, CUTS, TEARS, ABRASIONS OR CRACKS BEFORE AND AFTER EACH USE.

DO NOT EXPOSE THE PRODUCT TO OPEN FLAME OR EXCESSIVE HEAT. DO NOT ALTER THE PRODUCT IN ANY WAY.

OPERATOR'S MANUAL
MICRO FIGHT CHASIS MK6

V1.01

CONTENTS

- 01 COMPONENTS LIST
- 02 ATTACHING THE PLACARD
- 03 ATTACHING THE TUBES


DESIGNED, TESTED, AND MANUFACTURED IN **THE USA**

SEC 01 COMPONENTS AND ITEMS LEGEND

COMPONENTS


ITEM LIST

- 01 BUCKLE STRAPS
- 02 ATTACHMENT WINGS
- 03 REPAIR BUCKLES
- 04 MALE SIDE RELEASE
- 05 LOOP BACKER

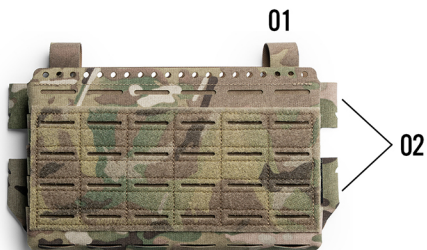

SEC 02 ATTACHING THE PLACARD

STEP 1

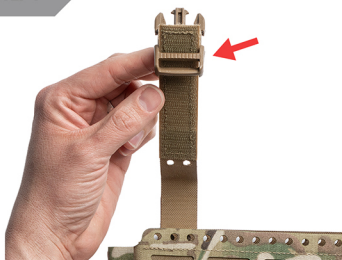

THREAD THE BUCKLE STRAPS THROUGH THE BUCKLE.

STEP 2



ALIGN THE CORD PASS-THROUGH HOLES AND PRESS THE BUCKLE STRAP HOOK ONTO THE LOOP.

STEP 3



REPEAT THE PROCESS WITH THE OTHER SIDE.

STEP 4



PUSH BOTH MALE BUCKLES INTO THE APPROPRIATE FEMALE BUCKLES.



SEC 03 ATTACHING THE TUBES

STEP 1



GATHER THE ITEMS NEEDED FOR THIS SETUP.

STEP 2



TAKE THE TUBES BUCKLE AND RUN THE BOTTOM SLIT OF THE TUBE THROUGH THE ATTACHMENT WING OPENING FIRST, THEN THEN PUSH IN THE TOP AS WELL.

STEP 3



REPEAT THE PROCESS WITH THE BOTTOM PART OF THE TUBE OPENING.

STEP 4



REPEAT THE PROCESS ON THE OTHER SIDE SO THAT IT LOOKS AS SHOWN.



SEC 04 ATTACHING THE FLAT G-HOOKS

STEP 1



GRAB ALL COMPONENTS NEEDED AND MAKE SURE THE FLAT G-HOOKS ARE FACING OUTWARD.

STEP 2



TAKE THE BUCKLE STRAP AND RUN IT THROUGH THE FIRST SLOT ON THE FLAT G-HOOK AS SHOWN. THEN RUN IT OVER THROUGH THE BOTTOM SLOT AND ADJUST HEIGHT.

STEP 3



TUCK THE BUCKLE STRAP INTO THE PLACARD AND PRESS IT AGAINST THE LOOP FIELD SECURING IT AS THE DESIRED HEIGHT.

STEP 4



REPEAT THE PROCESS ON THE OTHER SIDE SO THAT IT LOOKS AS SHOWN.

